



Scan to activate a
one-year warranty

Magnetix Keyboard Case


Manual

for Google Pixel Tablet

Power Switch




Pixel Tablet Pairing

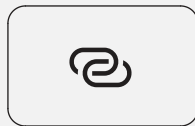

Hold the **bluetooth button** until the light at the right down corner is flashing - the keyboard will stop flashing once it is connected.

Enter Settings > Connected Devices > Connection Preferences > Bluetooth > Pair New Device > Find "eiP Magnetix Keyboard"

Backlight Adjustment

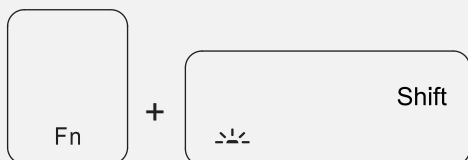

Press **Fn + Shift**
to switch brightness (4 stages)




Press **Fn + Enter**
to switch colors

Deactivate Trackpad




Press **Fn + Space** to conveniently deactivate the trackpad, ensuring uninterrupted typing without accidental cursor movements.

Shortcut for Google Assistant

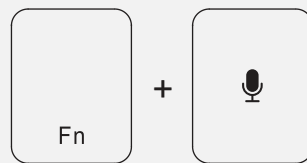

Press **Fn + Alt with Mic** to call out Google Assistant

Battery

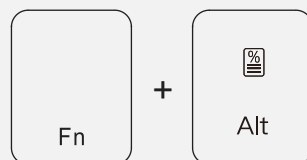

Press **Fn + Alt with Battery**, the light at the right down corner will flash to check the battery status.

Flash 4 times - 75%~100%
Flash 3 times - 50%~75%
Flash 2 times - 25%~50%
Flash 1 times - Below 25%


Shortcut Buttons



Home



Search

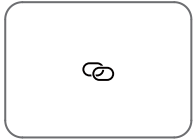


Bluetooth




Copy




Paste

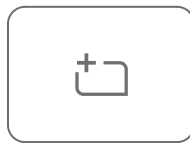


Screenshot

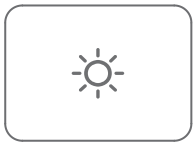


Brightness

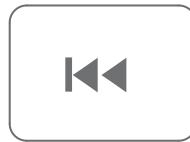

Previous Track

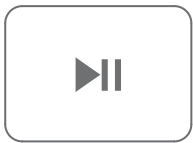

Pause / Play

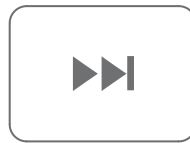

Next Track




Mail




Lock Screen


Hold for 1 sec to lock the screen and 2 sec to call out Google Assistant

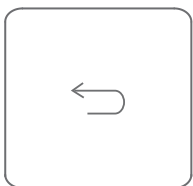

Return Key

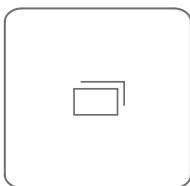


App Switcher

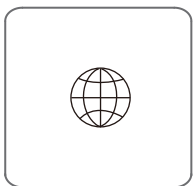


Language Switching


Trackpad Gesture

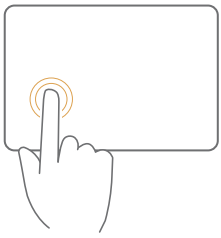


Left Click

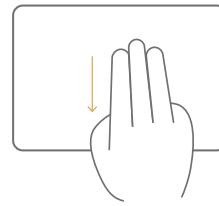


Home Page

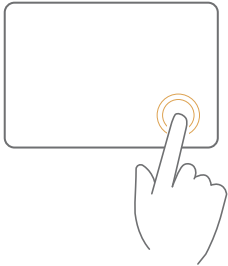


Right Click

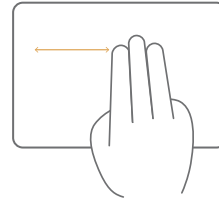


Switch between open apps

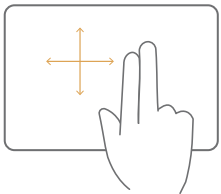


Scroll Up / Down

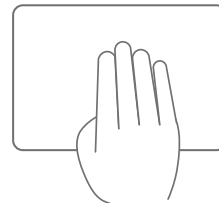

Screenshot
(Tap with 4 fingers)

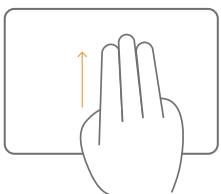


Switch to last using app

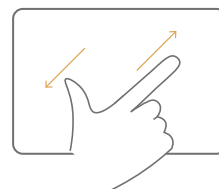

Zoom in
Zoom out

Note:

Zoom in / zoom out is only applicable on Picture. If you are on browser, please use control + +/- to zoom

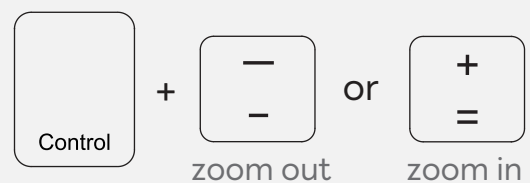

If the gesture fail, please restart the device. The gesture may change with Google's update, please check the QR code if the gesture is different.

FAQ

What can I do when the keyboard trackpad is a bit lag?


Check for Updates: Ensure your Pixel Tablet is running the latest software version. Google frequently releases updates to improve compatibility and performance with keyboards and trackpads.

Restart your Pixel Tablet: Sometimes, a simple restart can resolve temporary performance issues. Turn off your tablet, wait for a few seconds, and then turn it back on.

How to unlock the screen with trackpad?

Step 1: Left Click to awake the Pixel Tablet.

Step 2: Left Click + Swipe Up to access the unlock screen.

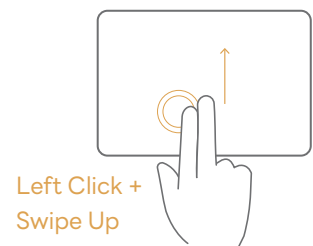

How to reset keyboard?

Hold **Home + Delete** for 3 seconds until the light flash, the keyboard is reset.



Attention

- Do not squeeze, twist or hit the keyboard.
- Do not put the product in microwave or strong magnetic field.
- Prevent splashing water on to keyboard, make sure the environment is dry.
- When no in use, in order to prolong the battery life, please turn off the keyboard.
- In order to get longer battery life, charging before keyboard power light flashes. The charging time should better be more than 2 hours.

Product Model Specification

Bluetooth Version	BT 5.1
Battery Capacity	500 mAh
Usage Time without Backlight	200 hours
Usage Time with Backlight	5 hours
Standby Time	3 months
Operating Distance Available	5 meters
Charging Time	2-3 hours
Bluetooth Name	eiP Magnetix Keyboard
Auto Sleep Mode	10 minutes unused
Charging Port	Type C

What's in the Box

Magnetix Keyboard Case*1
Charging Cable*1
User Manual*1

Contact Us

Lemeng Limited Company

Website: www.eipstore.com

Email: service-us@lemeng.com.tw




Co-brand: Penoval

Build your Pixel Tablet System

Magnetix Keyboard Case
for Google Pixel Tablet



Penoval Official Page

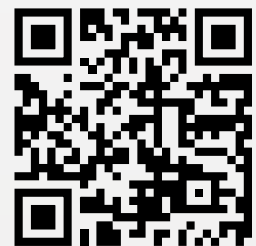

Online Manual